


# HX -4G Clients simple network camera

## Mobile client connection methods:

Mobile client download: search in the mobile phone software market **CamHi** (As shown below)

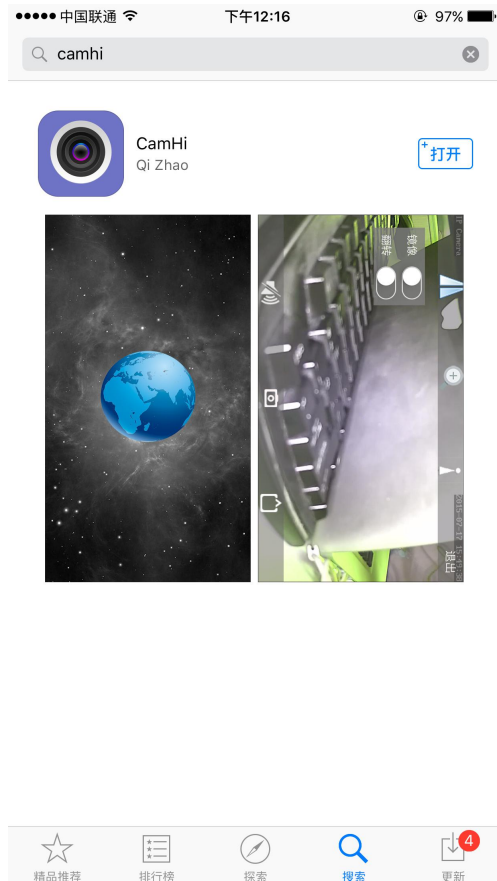


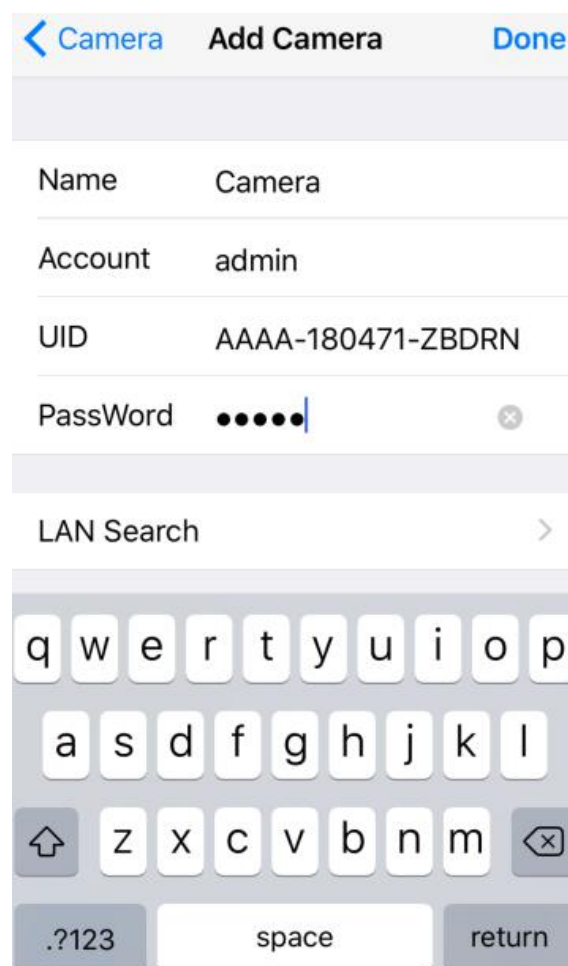
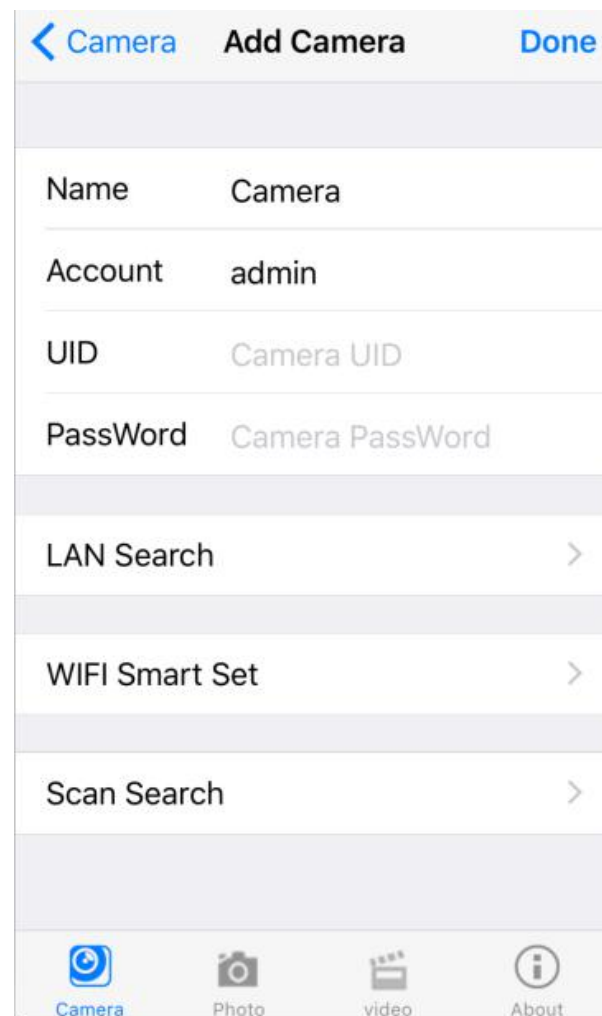
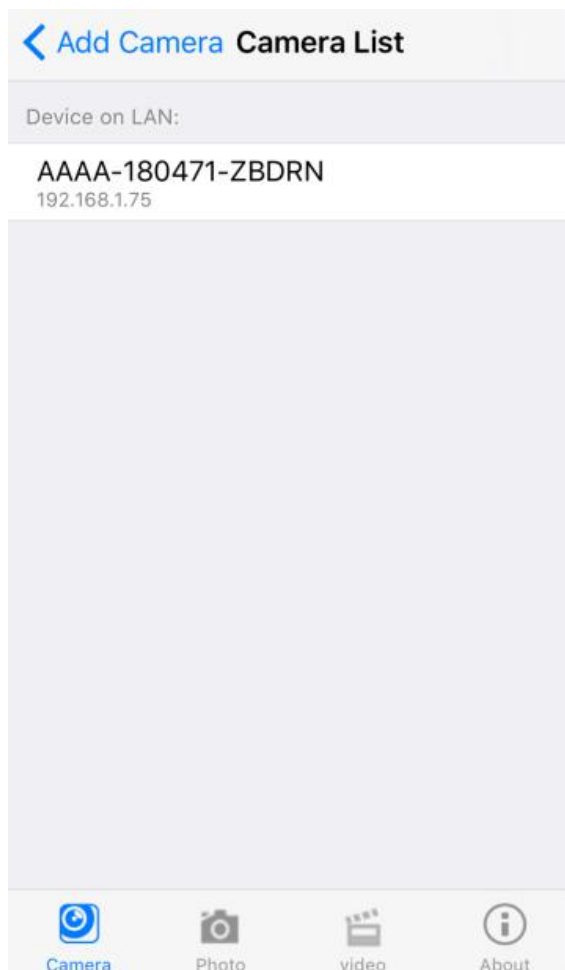
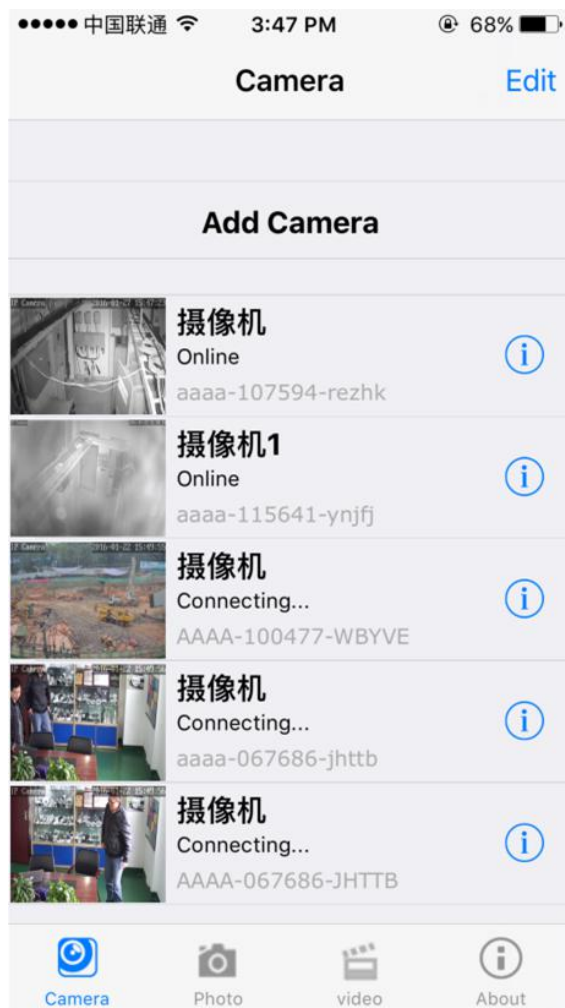
Step two. (Camera connected to power)

Step three.(WIFI open the phone search, find the camera hotspot WIFI connection (WIFI name begins: **IPCAM-\*\*\***, Password: **01234567**))


(If the camera has been linked WIFI or cable, omit step times)

Step four. (After connecting the camera hotspot WIFI, open monitoring


software  ,Click"Add Camera"→"LAN Search" →Appears UID and IP  
Click to addClick to add →enter password admin (The initial username and password are admin) (As shown below)



Step Five : Back camera home page, click the camera can monitor the viewing screen. (As shown below)

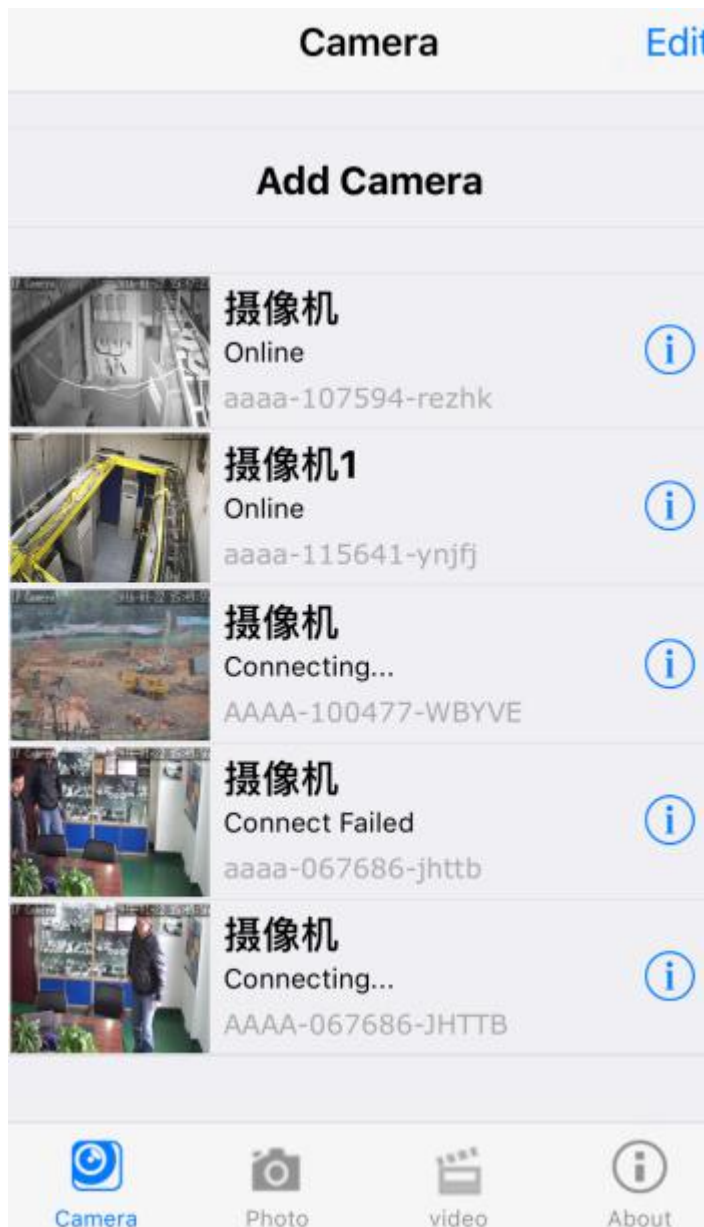

**Note 1: The camera settings method。** Click on the right side of the

camera  , They can enter the camera setting page 。 (See below) can be set to change the password, timing video, audio settings, WIFI settings and so on.



WIFI setting allows the camera to connect local WIFI router, so the camera even on the Internet.

In the case of networked cameras: PC clients need to watch if our software can be installed directly, click on the search or direct add camera UID can be monitored. (Camera UID is a series


of letters beginning AAAA + digital AAAA-100477-WBYVE )

Note 2: The local video and remote video viewing

1 Open the video bar navigation bar.



2 in the upper right corner to select local and remote video viewing  
(Standby: Remote is a camera TF card to store video)

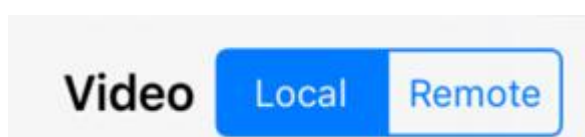

3 Click Camera ID can consult local / remote recording (see below)

