

How to let two batteries be in parallel?

1. First, let two batteries be in parallel by the cable with two Anderson connector




2. Let two batteries communicate with an internet cable.




# PSC SOLAR UK

2.1 The two RS485 are used for the battery to communicate with each other

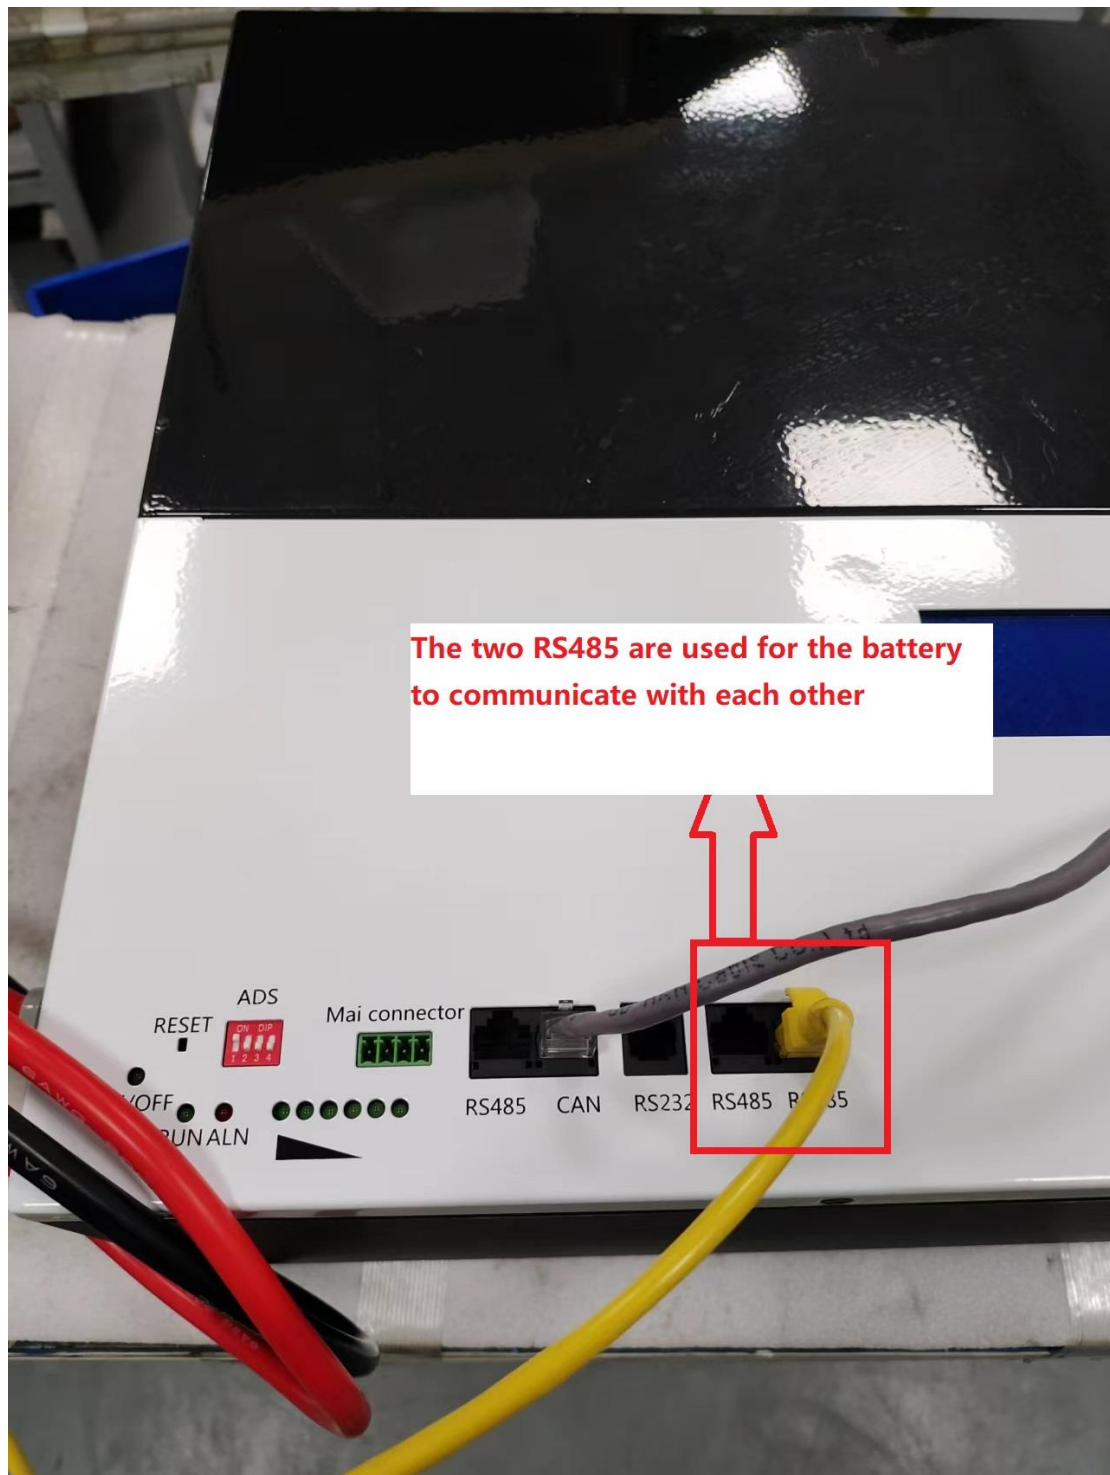


# PSC SOLAR UK

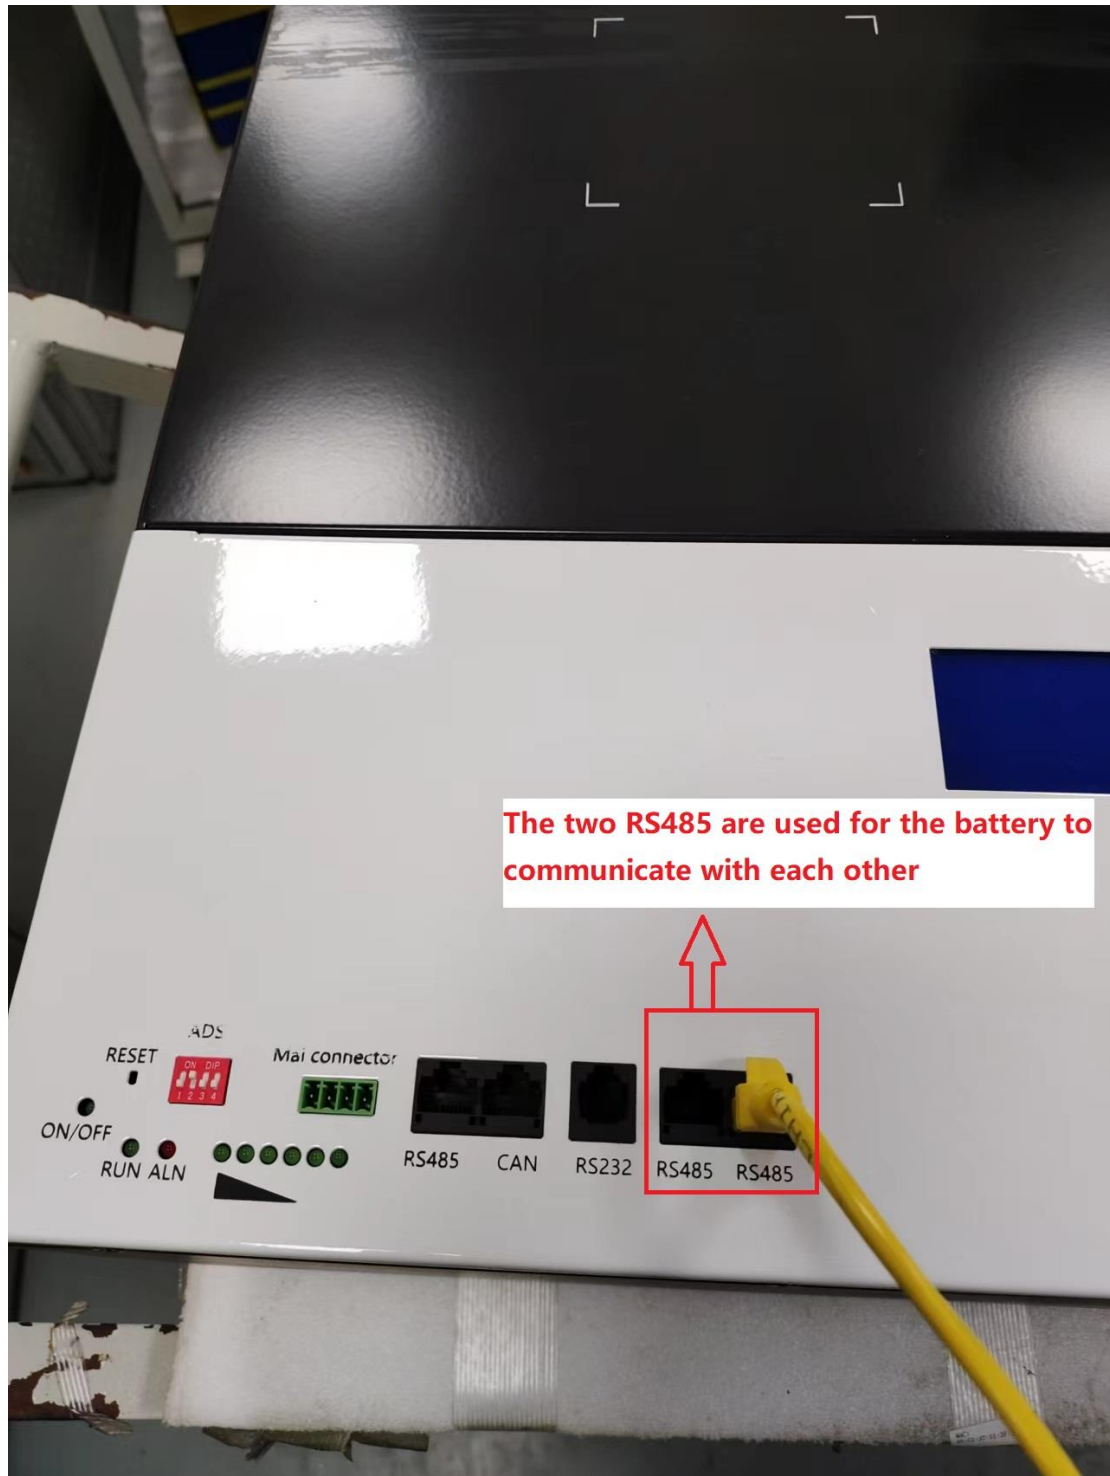


## 3.How to switch DIP

3.1 The main battery that connects with an inverter is:

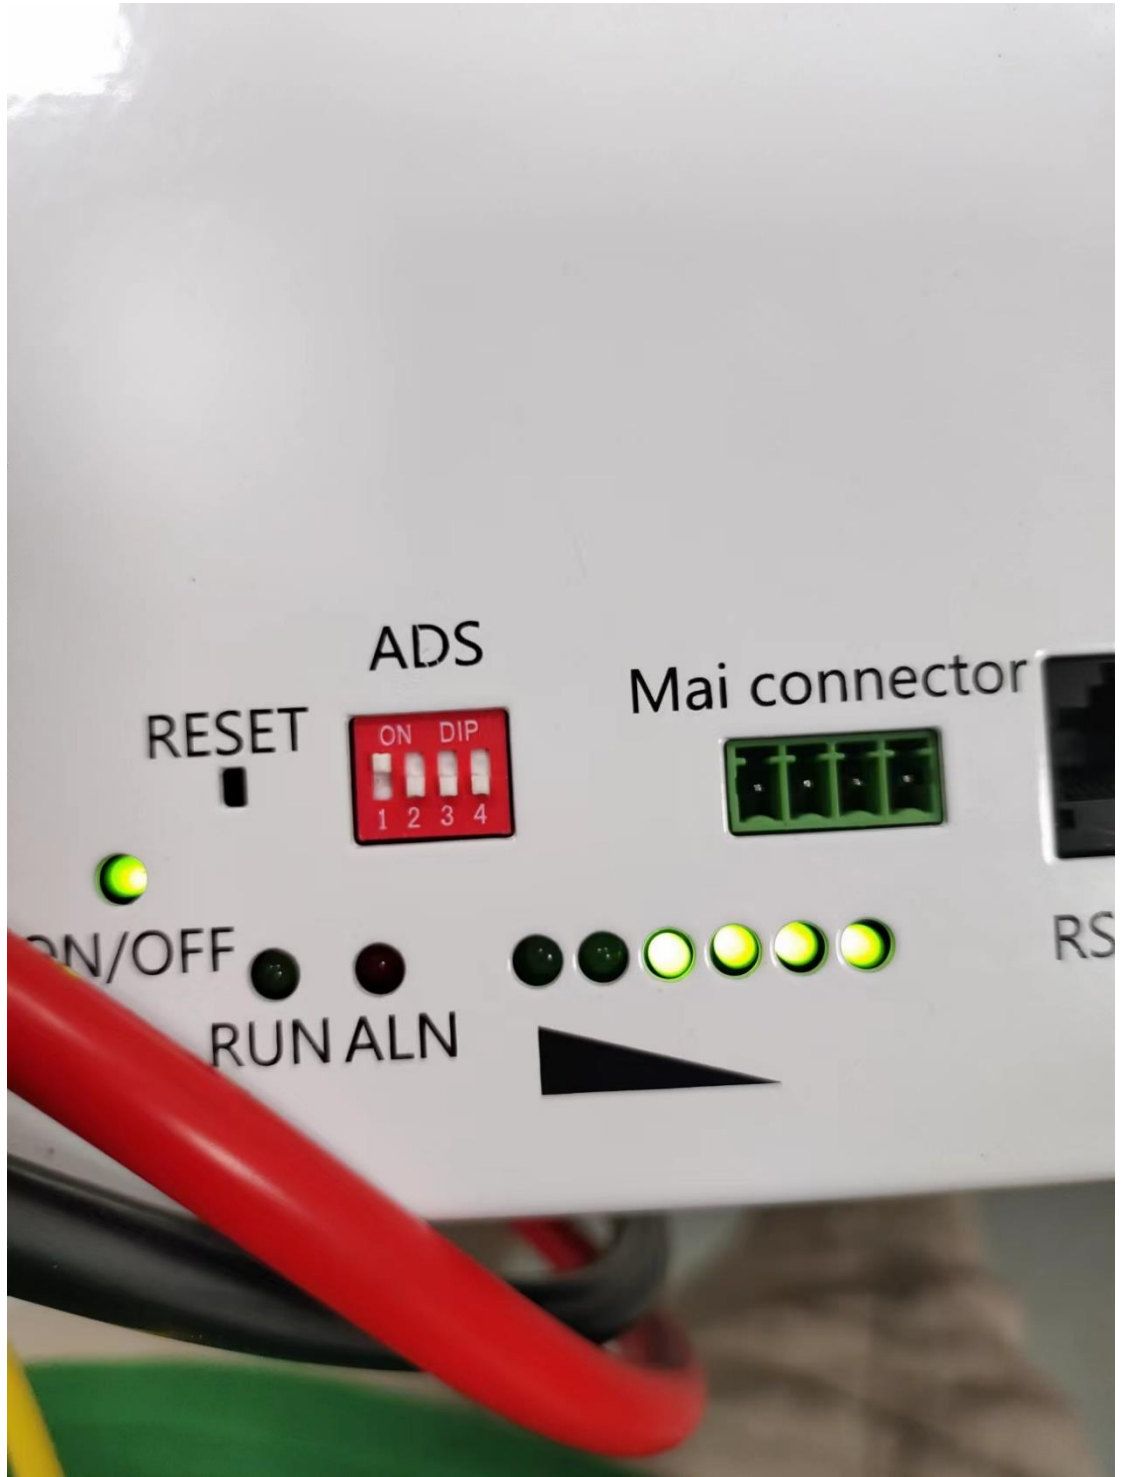


3.2 Another battery is :

# PSC SOLAR UK

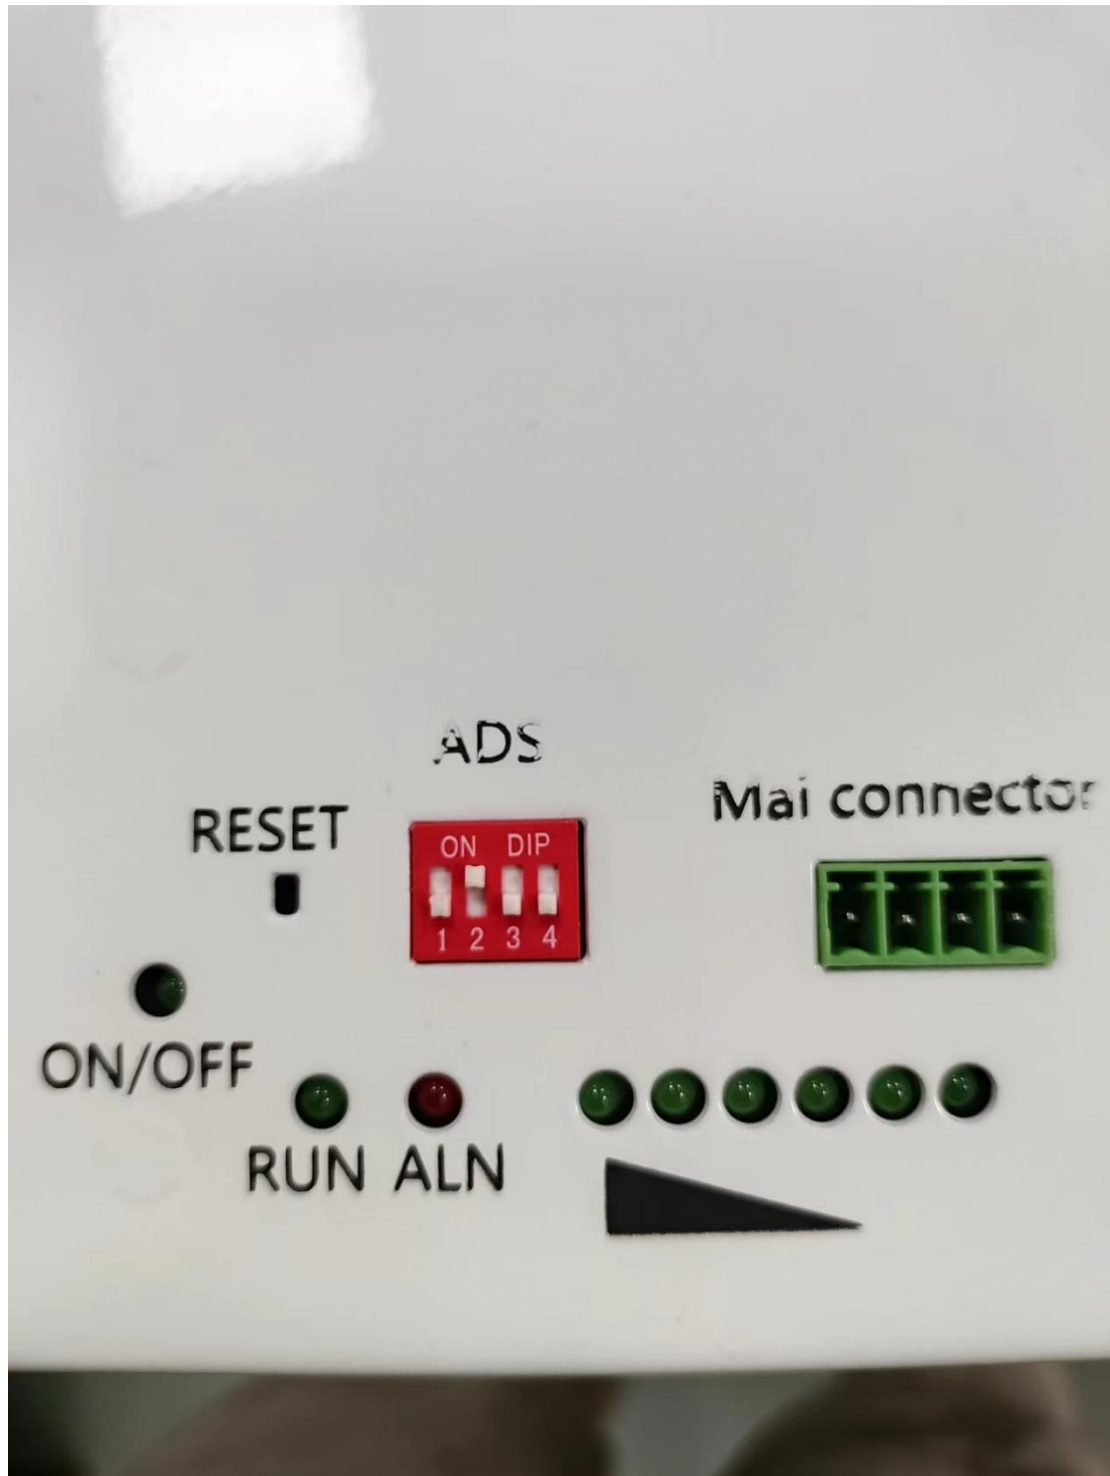

4. Connect with an inverter

# PSC SOLAR UK

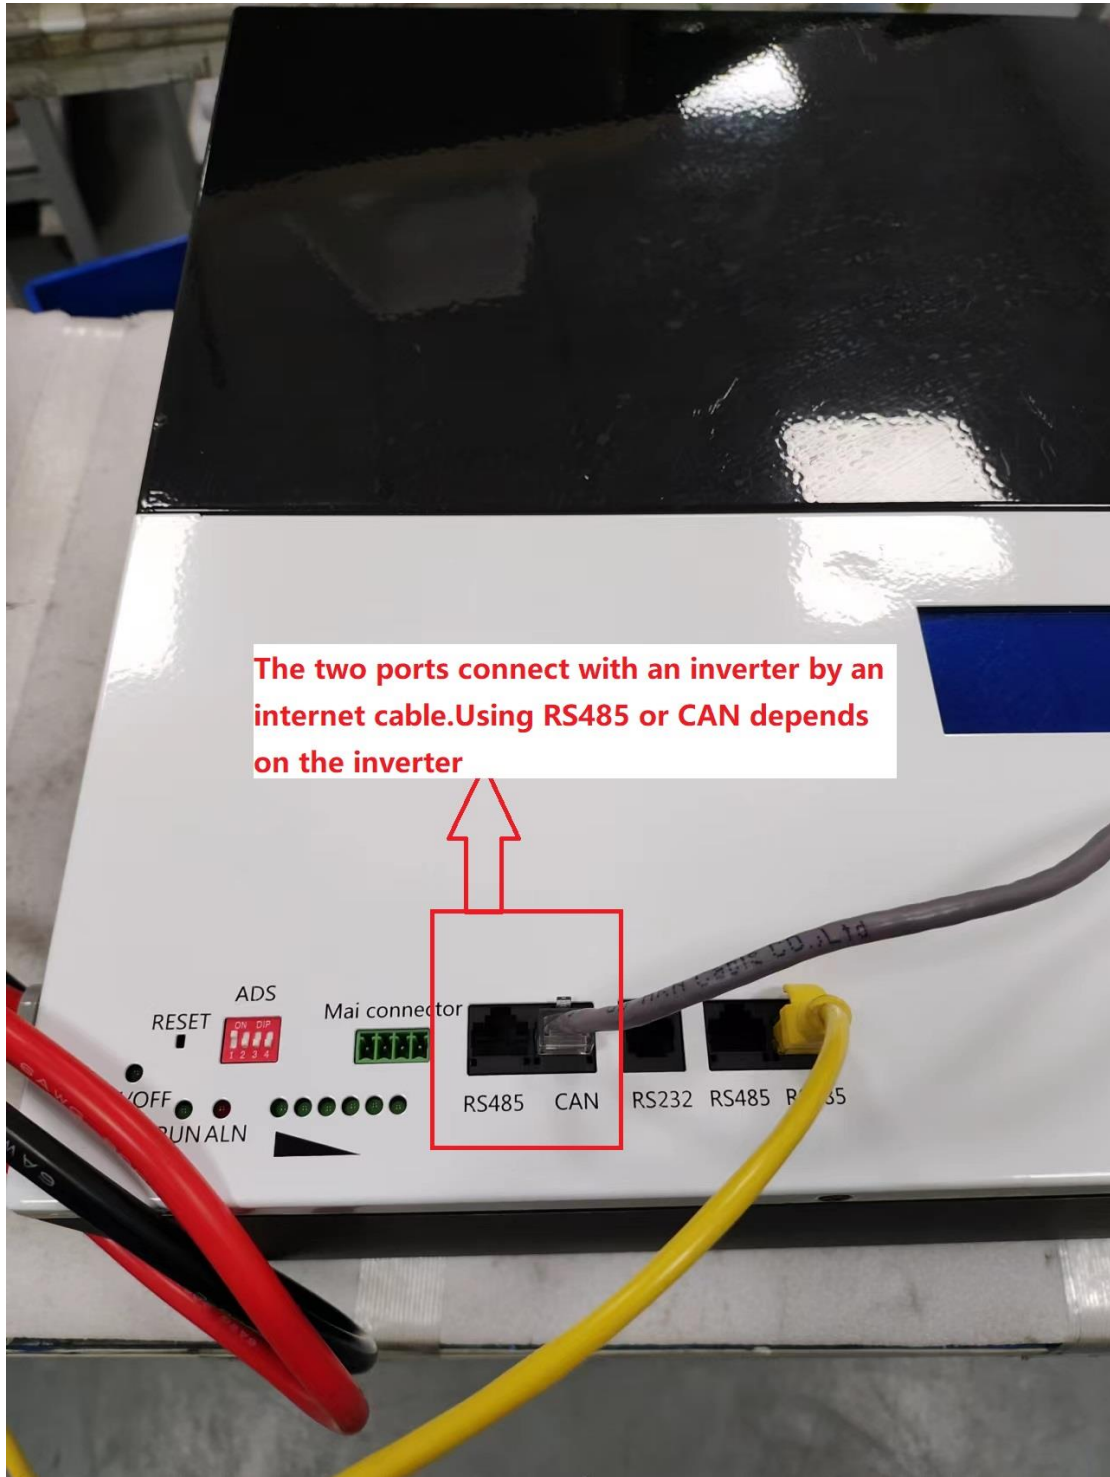

The two ports connect with an inverter by an internet cable. Using RS485 or CAN depends on the inverter